

BYRNE™

CHARGING YOUR HITCH

INITIAL CHARGE

When charging your Hitch for the first time, it is important to leave the unit connected to the charger for 4 hours after the display indicates a full charge, to ensure long lasting battery life. This step is only necessary for the first time Hitch is charged.

DEAD TO FULL CHARGE TIME

Hitch will charge fully in 4 hours.

POWER SUPPLY SPECS

5.0 Volts at 4 Amps

LED BATTERY DISPLAY

What do the LEDs indicate?


-  Flashing LED lights – Seen for the first 2 secs after plugged into a charger. Signifies the connection.
-  The third LED flashing - Fault in communication please contact customer service.

While charging the LEDs will cycle through the lights to indicate the level of the charge. Starting with 1 and stopping at the charge level. Each light in the cycle accounting for 25% of a fully charged battery.


-  ●○○○ 0-25% Charge level
-  ●●○○ 25-50% Charge level
-  ●●●○ 50-75% Charge level
-  ●●●● 75-100% Charge level

All 4 lights will remain on when the battery has reached 100% charge level.

PACKAGE INCLUDES

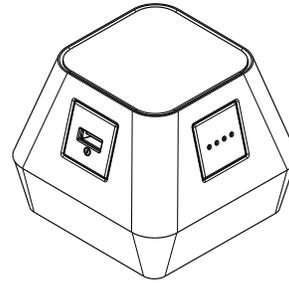

(1) Hitch

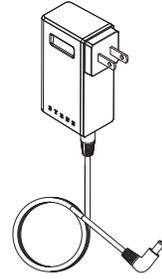

(1) Charging cord

WARNINGS

- Do not disassemble
- Do not penetrate unit with foreign objects
- Avoid strong impacts
- Do not crush
- Do not incinerate
- Avoid prolonged exposure to heat above 60°C
- Do not microwave unit, place in high pressure containers or induction heating devices

Failure to comply may cause electrical and/or fire hazards resulting in serious injury

CLEAN AND CARE

HOW TO STORE

Store in a cool dry place. Ideal storage temperature range -20C to 60C. Additionally, if left unused for long periods of time (2+ months), the unit should be placed on the charger for 2 hours for every 2 months left unused. This helps keep the battery healthy.

CLEANING INSTRUCTIONS

Wipe with damp cloth. If necessary, a mild detergent may be applied to the cloth.
Do not submerge in water.
Do not spray unit directly with water or cleaner