


BYRNE

INSTALLATION INSTRUCTIONS FOR NACRE

Install data jacks as described in the installation instructions provided with data adapters.

Attach 4 clips, two at each end on back of unit base.

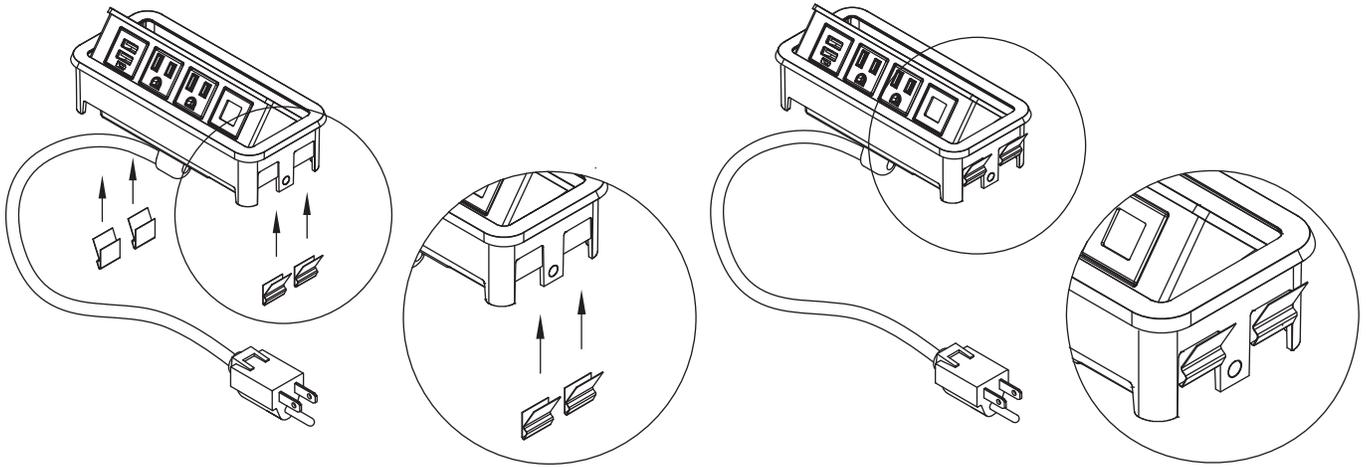

Determine placement of Nacre. Cut out hole according to below dimensions.

