


BYRNE™

INSTALLATION INSTRUCTIONS FOR HEXPLEX

- ① Screw mount into place using two #8 screws.

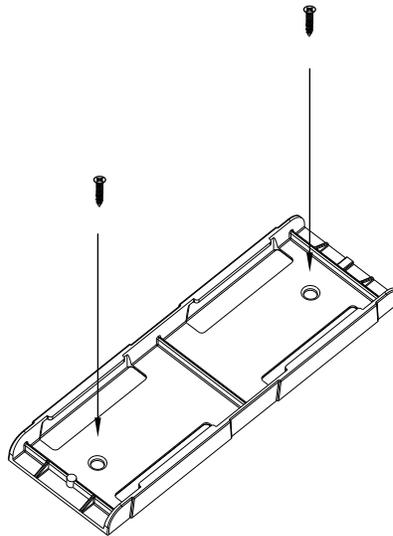

- ② Slide unit into the mount, inserting the unit into the grooves of the mount.

